


BTE Hearing Aids - Exchanging Ear Tips and Domes

Exchange the ear pieces and tubes approximately every three to six months, or sooner if you notice cracks or other changes.

Exchanging standard Domes (Tips)

- Pull off the used dome
- Push on the new dome until it is firmly clicked in place.

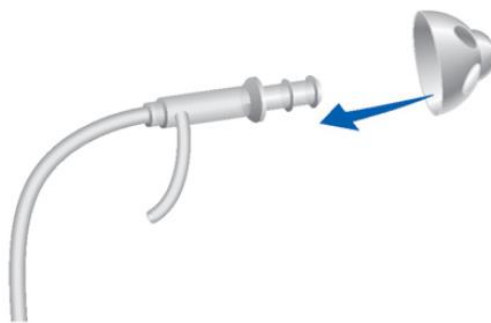

Exchanging standard tubes and adapters

- Unscrew the used tube from the adapter **1**
- If necessary, unscrew the used adapter (usually only when it has become damaged) **2**
- Screw on the new adapter and tube



Exchanging earhooks

- Unscrew the used earhook
- Position the earhook on the thread as shown in picture **1**
- Gently screw on the earhook with three full turns **2**

Do not turn it further to prevent damage.

